

# *e-mail* Multimedia Keyboard

## Multimedia key Function

- Sleep



Sleep On computers with a power management program, the " Sleep" Hot Key enables you to: Start your screen saver / Log off Windows / Shut down Windows. (Except WIN95 O.S.)  
Suspend Turns the system into screen saver.(WIN95 O.S. ONLY)

**Note :** The program may not function properly in some computers.

- Wake Up



On computers with a power management program, the " Wake Up " Hot Key enables you to restore, or Wake up your computer.

- Power Down



On computers with a power management program, the "Power" Hot Key enables you to: Log off Windows / Shut down Windows.

- Back



Press this button to go to previous page.

- Forward



Press this button to go to next page.

- Stop



Press this button to stop current transmission.

- Refresh



Press this button to update the current page.

- Search



Press this button to bring up " Search Window " for Web address.  
Press this button again to close " Search Window ".

- Favorites



Press this button to bring up " My Favorite Window " .  
Press this button again to close " My Favorite Window ".

- Web/Home



Press this button to go to the default Home Page.

- Mail



 
Press this button to activate the e-mail system.

- Mute



Press this button to mute sound. Press it again to resume sound.

- -Volume



Press this button to decrease volume.

- +Volume



Press this button to increase volume.

- Previous



Press this button to set media back by one track. During playback of a video file, depress this button to cause the player to rapidly reverse it's playback direction. Press this button once to skip back to the beginning of current track. Press this button twice to skip back to the beginning of previous track.

- Stop



Press this button to stop playing the media.

- Play/Pause



Press this button to begin playing a CD or a video file (or to restart after pause). During playback press this key to pause the playback, press it again to resume playback on current position.

- Next



 
Press this button to instruct the CD player to queue up beginning of the next track. During play back in a video file. Depress this button to cause the player to fast forward.

- Media



Press this button to activate " Windows Media Player ".

- Calculator



Press this button to activate Windows " Calculator ".

- My computer



Press this button to open " My computer ".

### **Attention To: WIN98 NT 2000 USERS**

Update Windows Multimedia Player ( WMP ) please link to the web site:

<http://www.microsoft.com/downloads>

#### **Note :**

Do not install other software such as Winamp, Xing Mpeg Player etc.

This is to prevent collision with other multimedia programs, which may cause Unexpected problems.